

#10134 - Lock Out Installation Instructions

Parts:


2 ea	1/2-13x4 Gr.8 Bolt
2 ea	1/2-13 Gr.8 Nut
2 ea	1/2 Lock Washer
4 ea	Cams
4 ea	1/2 Flat Washers

Note:

The lock out plates offers an adjustment range of 0 to 0.41 inches from center.

Instructions:

- 1. Remove the alignment cams from the control arm pivots.
- 2. Install the lock out plates. They can be rotated and turned over in order to be as close as possible to the correct position.
- 3. Small adjustments to the alignment may need to be done by shimming the upper control arm cross shaft.

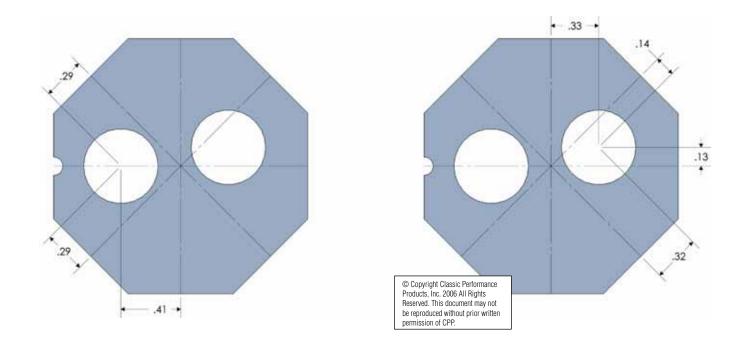

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500 378 E. Orangethorpe Ave. | Placentia, CA 92870 | www.classicperform.com