


www.vintageair.com



## **Table of Contents**

Cover	. 1
Table of Contents	. 2
Packing List/Parts Disclaimer	. 3
OEM Control Panel Removal	. 4
Control Panel Installation	.5
Wiring Diagram	. 6
Operation of Controls	. 7
Packing List	. 8

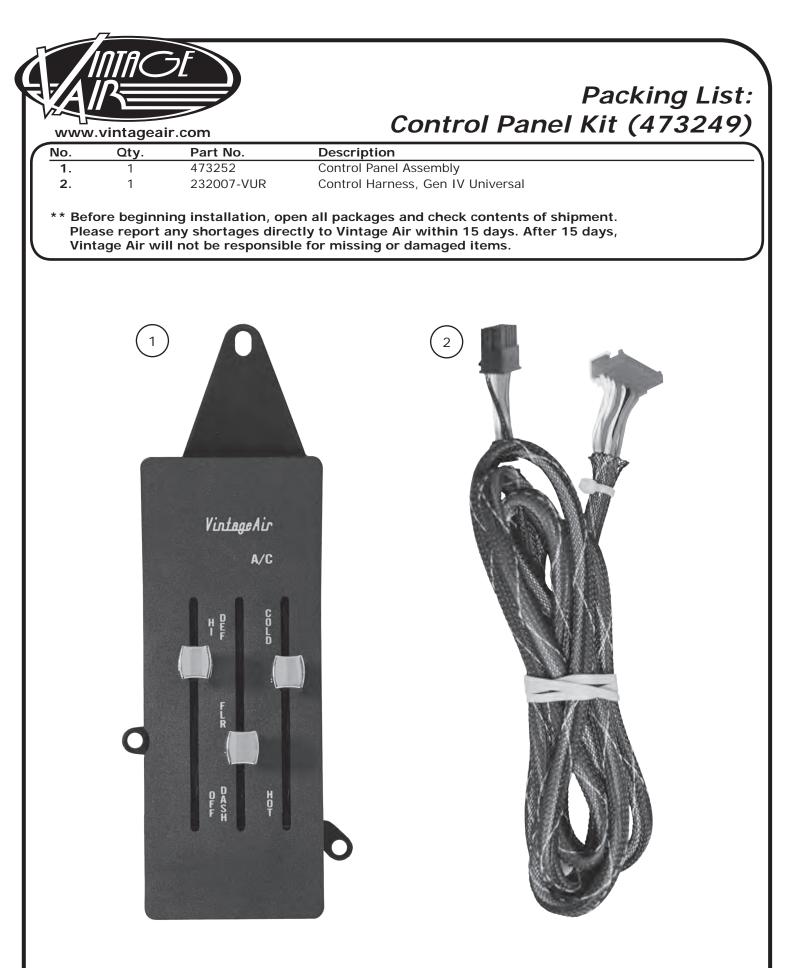


NOTE: Images may not depict actual parts and quantities. Refer to packing list for actual parts and quantities.



## **OEM Control Panel Removal**

#### Perform the Following:

**1.** Remove the OEM control panel from the dash housing by removing the (3) mounting screws as shown in Photos 1, 2 and 3, below (retain screws).

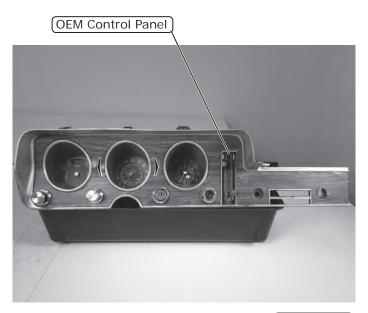


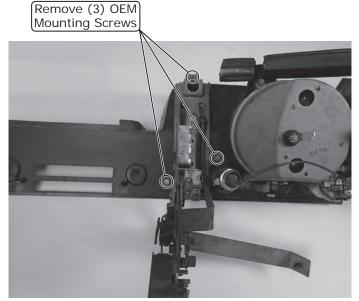


Photo 1

Photo 2

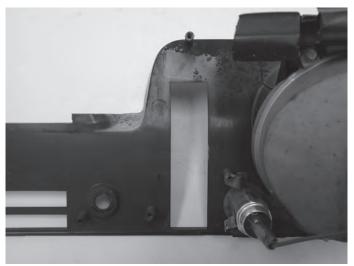

**Control Panel Removed** 


Photo 3



#### www.vintageair.com

### **Control Panel Installation**

- Install the new Vintage Air control panel into the OEM position and secure it using the (3) OEM mounting screws (See Photos 1 and 2, below). NOTE: Position the control knobs as shown in Photo 1, below, to insert the control panel into the dash opening. The control panel knobs have been pressed into a position to clear the trim around the dash opening. Do not remove the control panel knobs so proper positioning is maintained.
- 2. Plug the control panel harness connector into the ECU (See Photo 3, below). NOTE: The ECU module is located on the evaporator sub case. When using a Vintage Air supplied control panel, connect the tan wire from the GEN IV evaporator wiring harness (232600-VUA) to the factory dash lights to enable panel back lighting.

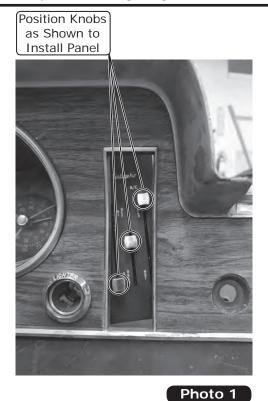


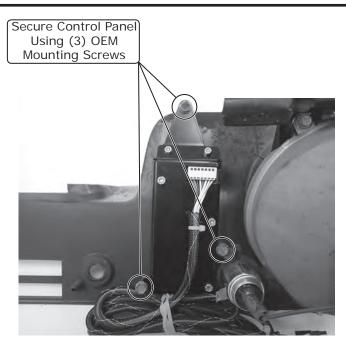


Photo 2

(ECU Module)




Control Panel Harness Connector

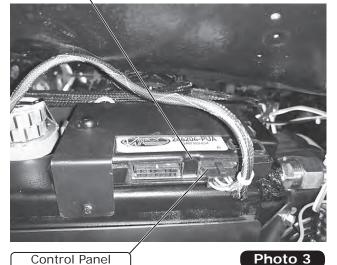

Completed Control Panel Installation



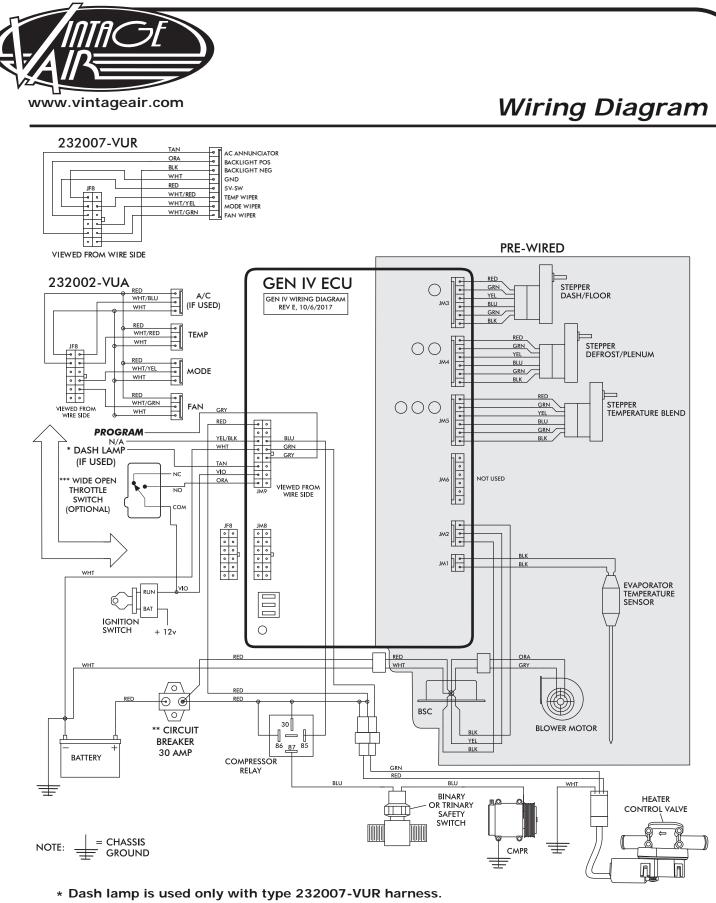

\*\* Warning: Always mount circuit breaker as close to the battery as possible. (NOTE: Wire between battery and circuit breaker is unprotected and should be carefully routed to avoid a short circuit).


6


\*\*\* Wide open throttle switch contacts close only at full throttle, which disables A/C compressor.

# www.vintageair.com

## **Operation of Controls**

On Gen IV systems with three lever/knob controls, the temperature control toggles between heat and A/C operations. To activate A/C, move the temperature lever/knob all the way to cold and then back it off to the desired vent temperature. For heat operation, move the temperature lever/knob all the way to hot and then adjust to the desired vent temperature. The blower will momentarily change speed, each time you toggle between operations, to indicate the change.

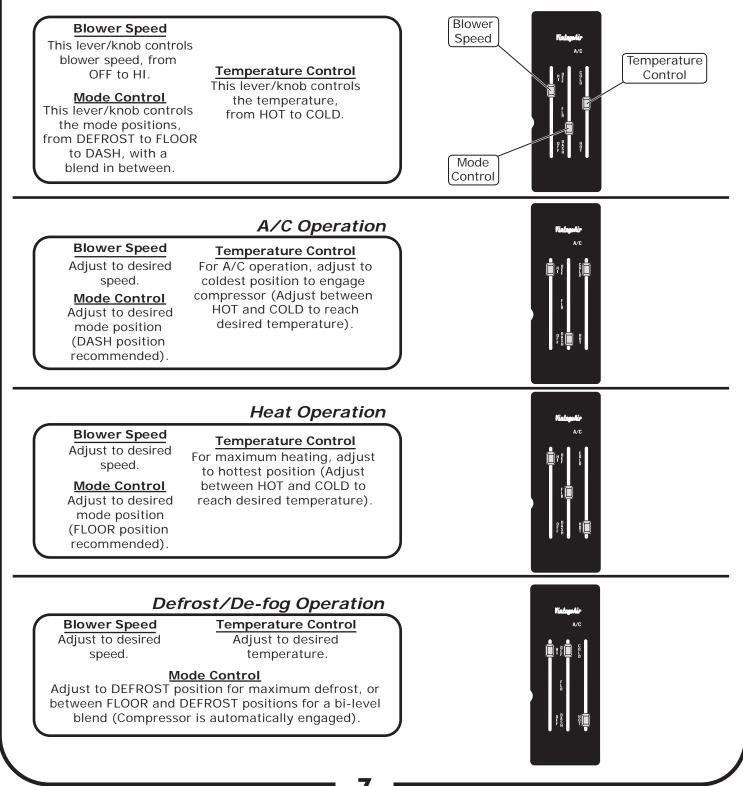

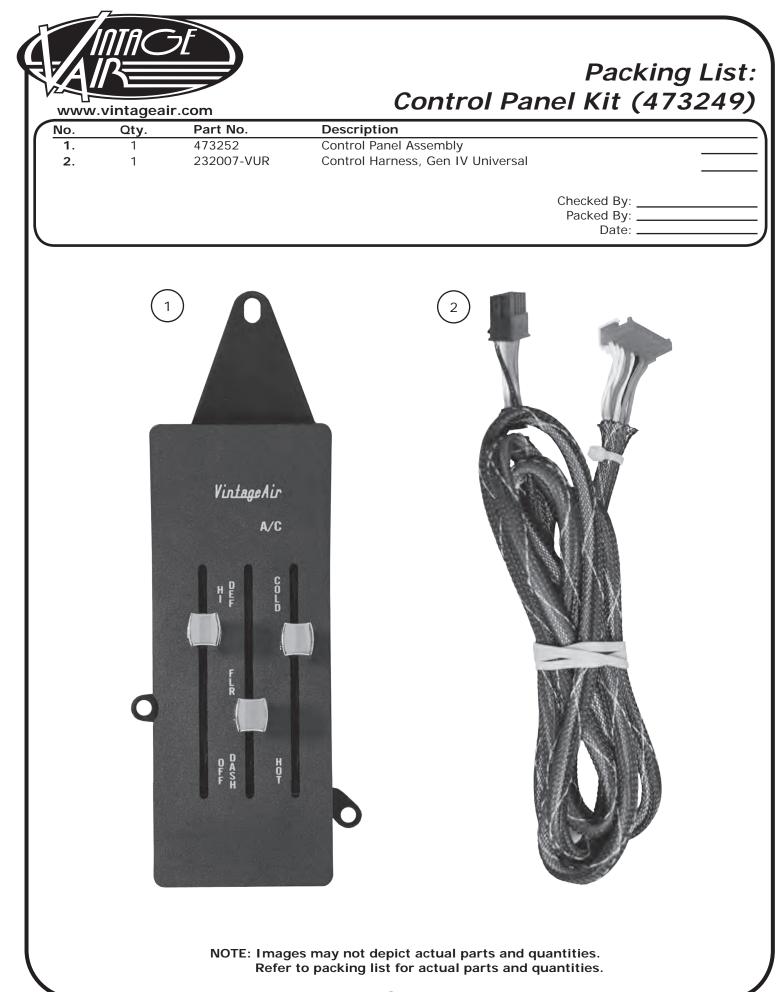

8