



Steering, Brake & Suspension Specialists

#5557TCA-UK Installation Instructions

for 1955-57 Tubular Upper Control Arms

Parts List:

- 1 ea Left Upper Control Arm Assembly
- 1 ea Right Upper Control Arm Assembly

Note:


The ball joint is mounted to the bottom side of the control arm.
The control arms are built to provide 5° of caster.

Warning:

Do not remove the cross shaft bolts. They are installed with Loctite.
Removing the cross shaft bolts will void the warranty.

Instructions:

1. Remove the original upper control arms.
2. Install the new upper control arm assemblies. The long tube will be towards the front of the car. CPP recommends using new ball joints (part # FA500) and new bump stops (part# 3773361).
3. Have the car professionally aligned.

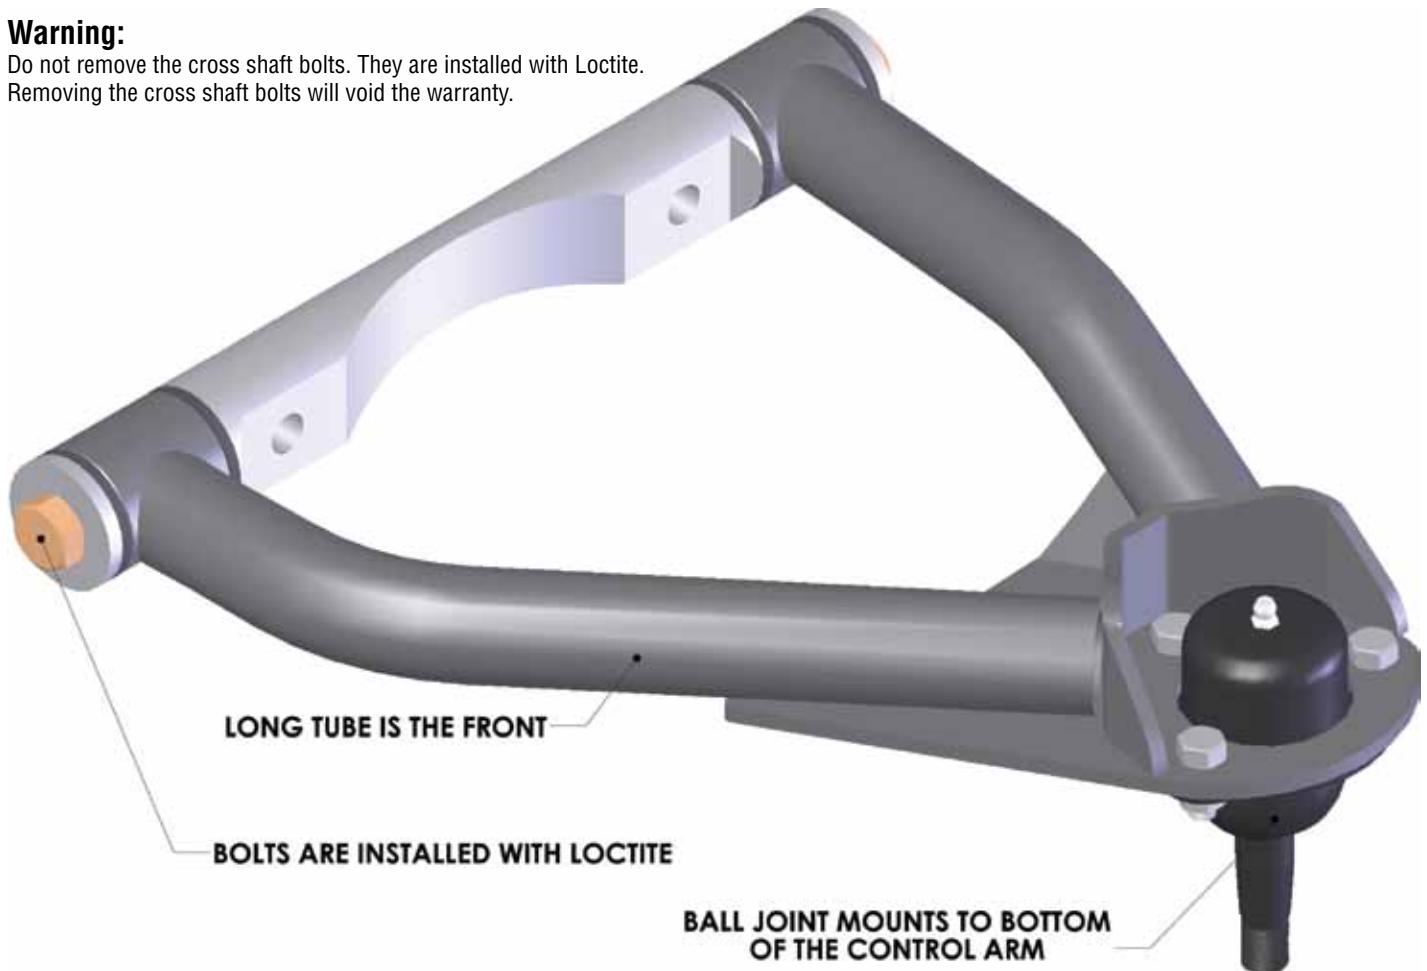

Classic Performance Products, Inc. 714.522.2000 | fax 714.522.2500
378 E. Orangethorpe Ave. | Placentia, CA 92870 | www.classicperform.com