




www.vintageair.com

Installation Instructions: 4-Way Inline #6 - #10 Streamline Bulkhead (386600-MBA)

1. Cut out the bulkhead template and locate where you would like to place your bulkhead.
2. Level and tape the bulkhead template into place. Use a small center punch and mark holes.
3. Drill (4) 7/8" holes for the bulkhead fittings. Install the bulkhead with fittings as shown. **NOTE: Fittings may be arranged in any configuration.**

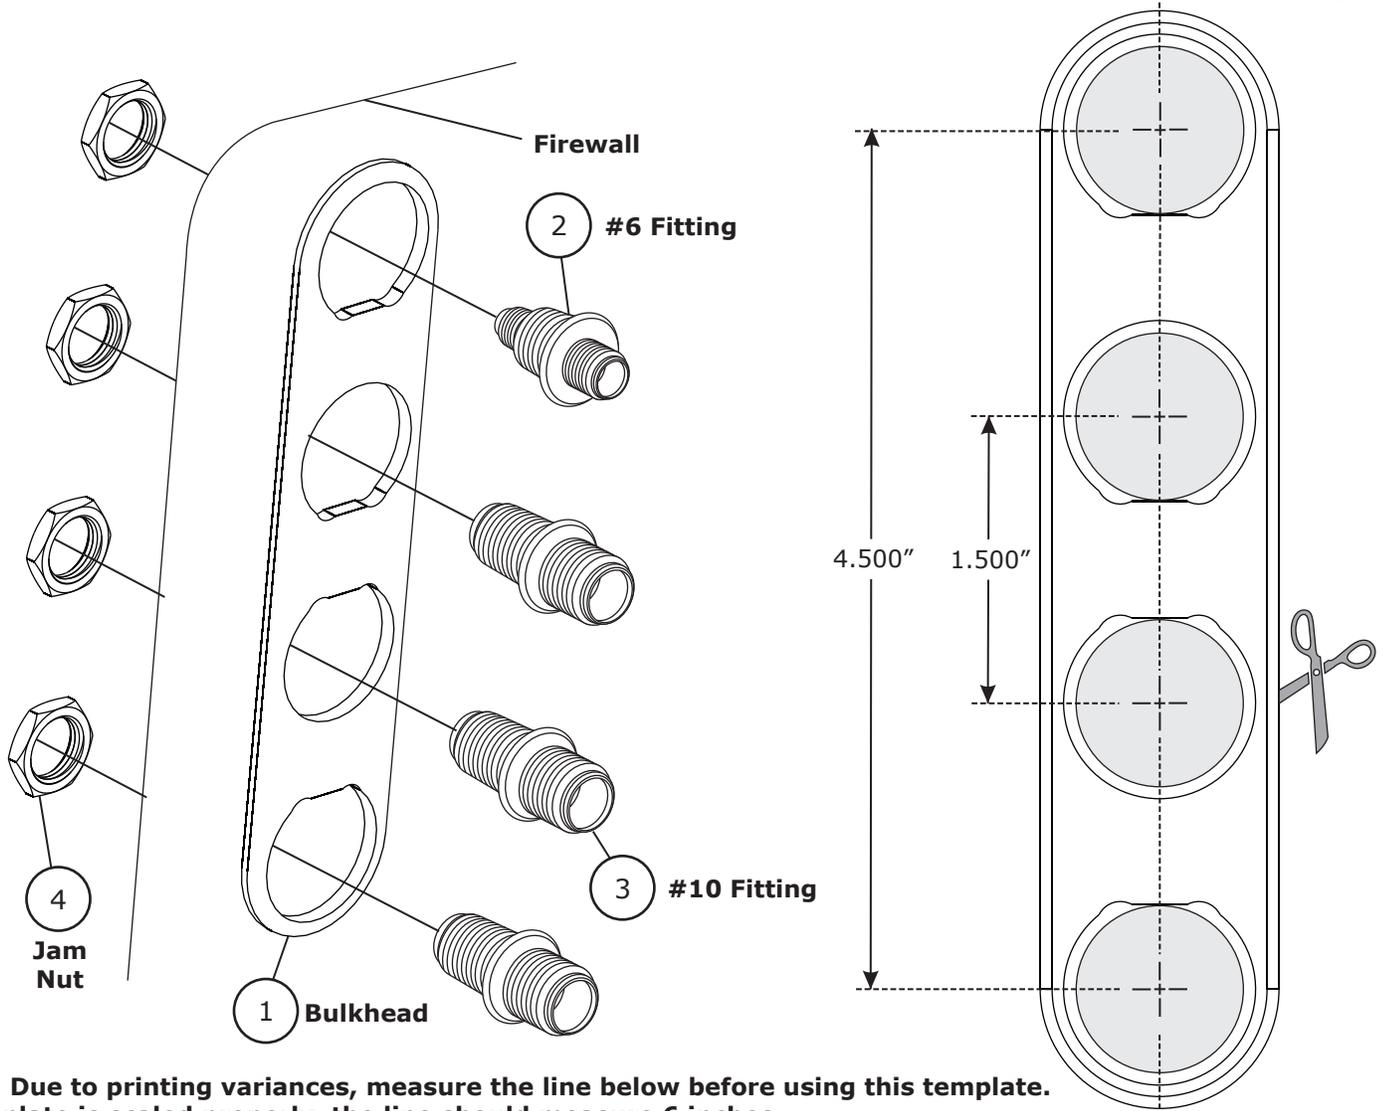

NOTE: Due to printing variances, measure the line below before using this template. If template is scaled properly, the line should measure 6 inches.

Packing List:

No.	Qty.	Part No.	Description
1.	1	386300-MBQ	Inline Bulkhead Plate, 4-Way
2.	1	334006-VOR	Bulkhead Fitting, #6, Male
3.	3	334010-VOR	Bulkhead Fitting, #10, Male
4.	4	186079	Jam Nut, 7/8-14

Checked By: _____
Packed By: _____
Date: _____