


# ALTERNATOR MOUNT 213R

Small Block Chevy - Short Water Pump  
Passenger Side - Wide Mount

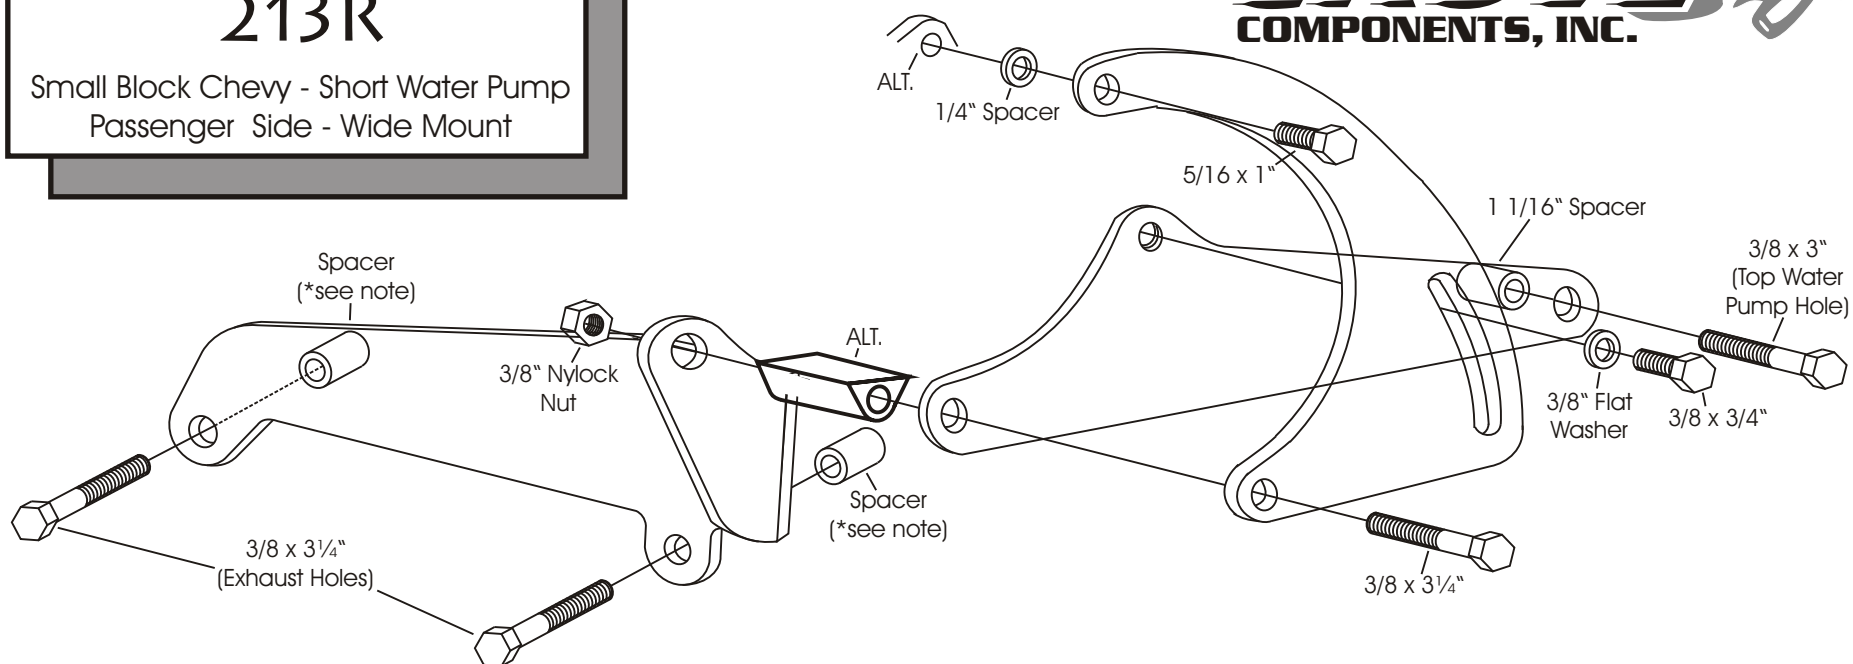

We use a belt length of 57-58" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.

\*NOTE: Exhaust Spacers - with HEADERS - use the 2 1/4" long x 5/8" O.D. Spacers. With RAMS HORN MANIFOLDS use the 1/4" long x 3/4" O.D. Spacer at rear hole of bracket and a 1 1/16" long x 3/4" O.D. spacer at front hole of bracket. With the later DROP-TYPE MANIFOLDS use the 1 1/16" long x 3/4" O.D. Spacers at both bracket holes. As with any mount system, assemble all of the brackets to engine BEFORE tightening the bolts.

**As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.**

ALTERNATOR  
MOUNT  
213R

Small Block Chevy - Short Water Pump  
Passenger Side - Wide Mount

**ALAN GROVE COMPONENTS, INC.**  
**27070 METCALF ROAD**  
**LOUISBURG, KS 66053**