

IMPORTANT PLEASE READ

Brake Hose Installation Instructions

for Caliper Banjo Bolt/Washer Revision

Notes:

When installing your brake hoses into your new Big Bore™ Calipers; please make sure you take a moment to review this sheet as may prevent any leaking.




A



B

Instructions:

1. Familiarize yourself with this proper positioning; The thin copper washer is between the head of the bolt and the hose and the thick copper washer is between the Hose and the caliper (Fig. A)
2. Once the hose/washer orientation matches the above; Install onto caliper as shown (Fig. B)

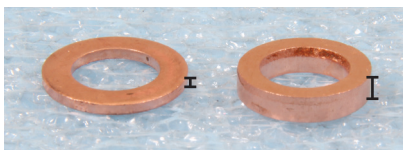

Also note that the bleeder and the banjo bolt can be placed in either hole so there is no right or left hand caliper. Just make sure that the bleeder points up during final installation.

Proceed to torque the banjo bolt to spec to finalize installation.

© Classic Performance Products, Inc. 2015
All rights reserved. This document may not be reproduced without prior written permission of CPP.