

# #6772HTH - Hidden Receiver Hitch Kit Instructions

## for 1967-72 C10 Chevy Truck

## Parts:

1 ea	Receiver Hitch	4 ea	5/8 Flat Washer
2 ea	1/2-13 Nut Plate	6 ea	1/2-13x2 gr. 8 Bolt
2 ea	5/8-18x1 1/2 gr. 8 Bolt	6 ea	1/2 Lock Washer
2 ea	5/8-18 gr. 8 Lock Nut	6 ea	1/2 Flat Washer

#### Note:

The License plate box will have to be modified. CPP recommends using the hinged license plate mounting bracket part #6772LPH.

## **Options:**


The hitch is designed to work with the 1963-72 frame mounted aluminum gas tanks part numbers; #6372AGT-BS, #6372AGT-BF, and #6372AGT-S.

### **Instructions:**

- 1. Remove the rear license plate box from the bumper.
- 2. Using the 5/8 hardware loosely bolt the hitch assembly to the bottom of the frame. The hitch should line up with two of the factory holes in the bottom rear section of the frame rails.
- 3. Using the nut plates on the inside of the frame rails install the two rear 1/2 bolts.

- 4. Tighten the 5/8 bolts.
- 5. Using the hitch as a guide, drill the remaining mounting holes though the frame.
- 6. Install the remaining 1/2 hardware.
- 7. Ensure that all the mounting bolts are tight.
- 8. Set the license plate box back in position in the rear bumper.
- Mark the license plate box where it needs to be cut to allow access to the receiver hitch.
- 10. Cut the license box were as necessary.
- 11. Install the hinged license plate bracket (CPP #6772LPB).

GENERAL TORQUE SPECIFICATIONS:							
1/4"	grade 5	10lb/ft	1/4"	grade 8	14lb/ft		
5/16"	grade 5	19lb/ft	5/16"	grade 8	29lb/ft		
3/8"	grade 5	33lb/ft	3/8"	grade 8	47lb/ft		
7/16"	grade 5	54lb/ft	7/16"	grade 8	78lb/ft		
1/2"	grade 5	78lb/ft	1/2"	grade 8	119lb/ft		
9/16"	grade 5	114lb/ft	9/16"	grade 8	169lb/ft		
5/8"	grade 5	154lb/ft	5/8"	grade 8	230lb/ft		

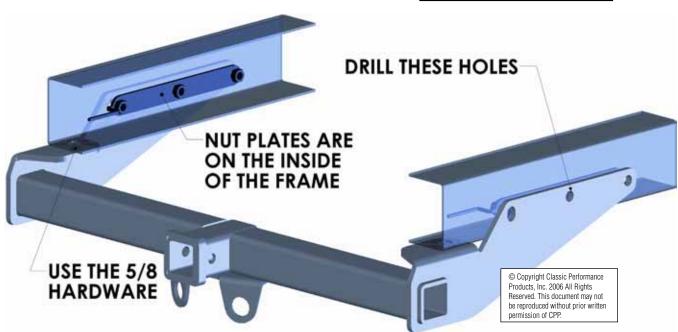

For technical help call Classic Performance Products Monday thru Friday 8:30am to 5:00pm at (714) 522-2000.