




an ISO 9001:2000 Registered Company

1955-57 CHEVY CONDENSER FOR CROSSFLOW RADIATOR

03455-VCC

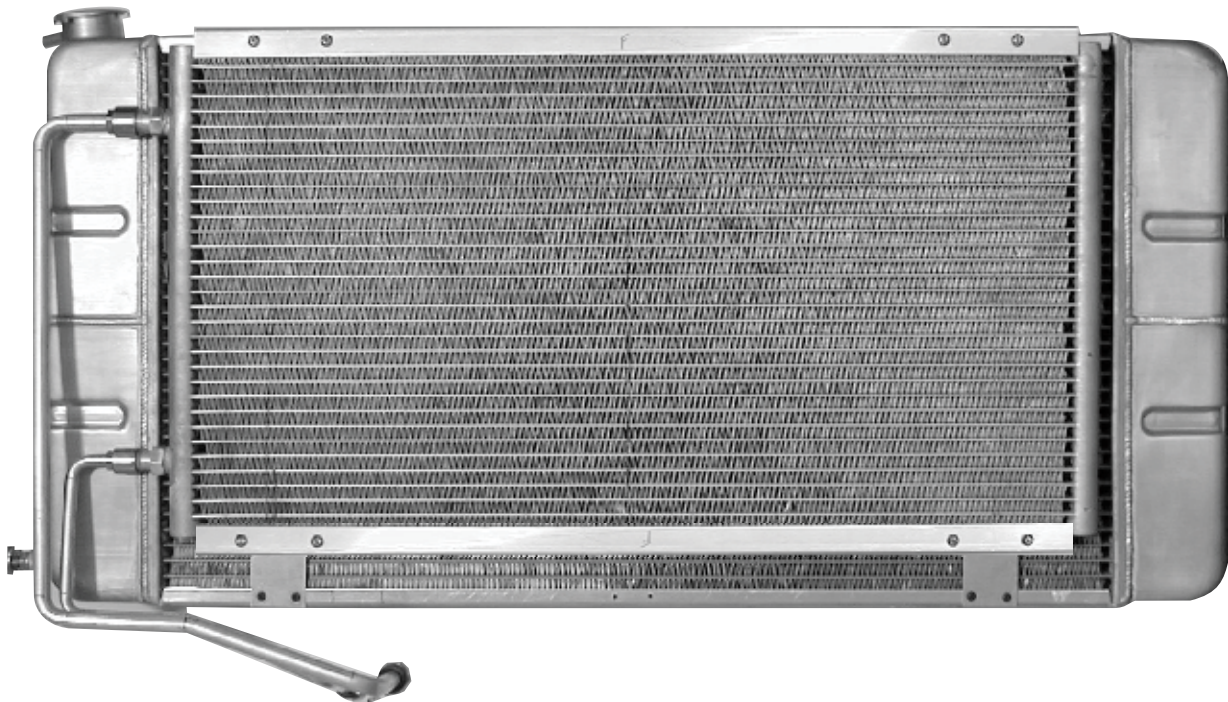


18865 GOLL ST. - SAN ANTONIO, TX. - 78266 ph.210-654-7171 - fax 210-654-3113




ASSEMBLY INSTRUCTIONS FOR 1955-57 CHEVY CONDENSER FOR CROSSFLOW RADIATOR:


1. UPPER BRACKET MOUNTS TO RADIATOR WITH (4) #6 x 3/8" SCREWS IN HOLES DRILLED BY CUSTOMER.
2. PLACE UPPER MOUNT ON RADIATOR, FLUSH WITH TOP OF RADIATOR, AND CENTER RIGHT & LEFT.
3. MARK THE (4) HOLES ON THE RADIATOR AND LIGHTLY CENTER PUNCH.
4. DRILL THE (4) HOLES WITH A 3/32" OR #42 DRILL BIT.
5. INSTALL UPPER MOUNT TO RADIATOR.
6. INSTALL J-CLIPS ON FRONT RAIL OF CONDENSER IN 2ND & 4TH HOLES FROM EACH END, ON TOP AND BOTTOM OF CONDENSER. AS SHOWN ON BOTTOM OF PAGE.
7. ATTACH THE (2) LOWER BRACKETS ON LOWER BACK RAIL OF CONDENSER IN THE 3RD & 4TH HOLES FROM EACH END. USING THE 10-24 x 1/2" SCREWS WITH THE HEADS TOWARD THE RADIATOR, SCREW INTO NUTS ON INSIDE OF BACK RAIL TO SECURE BRACKETS.
8. INSTALL CONDENSER INTO UPPER MOUNT, SO THAT J-NUTS ALIGN WITH PRE-DRILLED HOLES ON FRONT OF UPPER BRACKET, AND FASTEN THE (4) 10-24 x 1/2" STAINLESS BUTTON-HEAD SCREWS THRU THESE HOLES TO SECURE THE CONDENSER IN PLACE.
9. MARK HOLE LOCATIONS FOR LOWER MOUNT SCREWS AND DRILL THE (4) AFOREMENTIONED HOLES.
10. INSTALL (4) #6 x 3/8" SCREWS IN LOWER MOUNTS TO SECURE CONDENSER TO RADIATOR.
11. INSTALL BOTTOM CONDENSER TRIM WITH (4) 10-24 x 1/2" BUTTON HEAD SCREWS.


PLEASE REFER TO PHOTOS ON FOLLOWING PAGES FOR FURTHER CLARIFICATION.

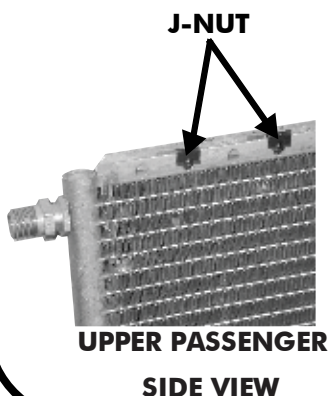

**INSTALL J-NUTS ON FRONT RAILS (UPPER & LOWER)
OF CONDENSER, IN 2ND & 4TH HOLES FROM EACH
END.**

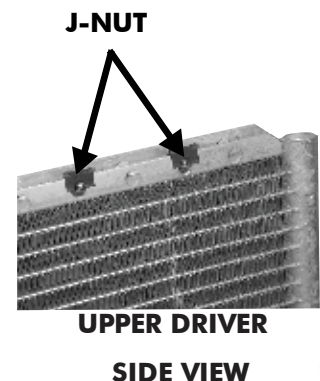


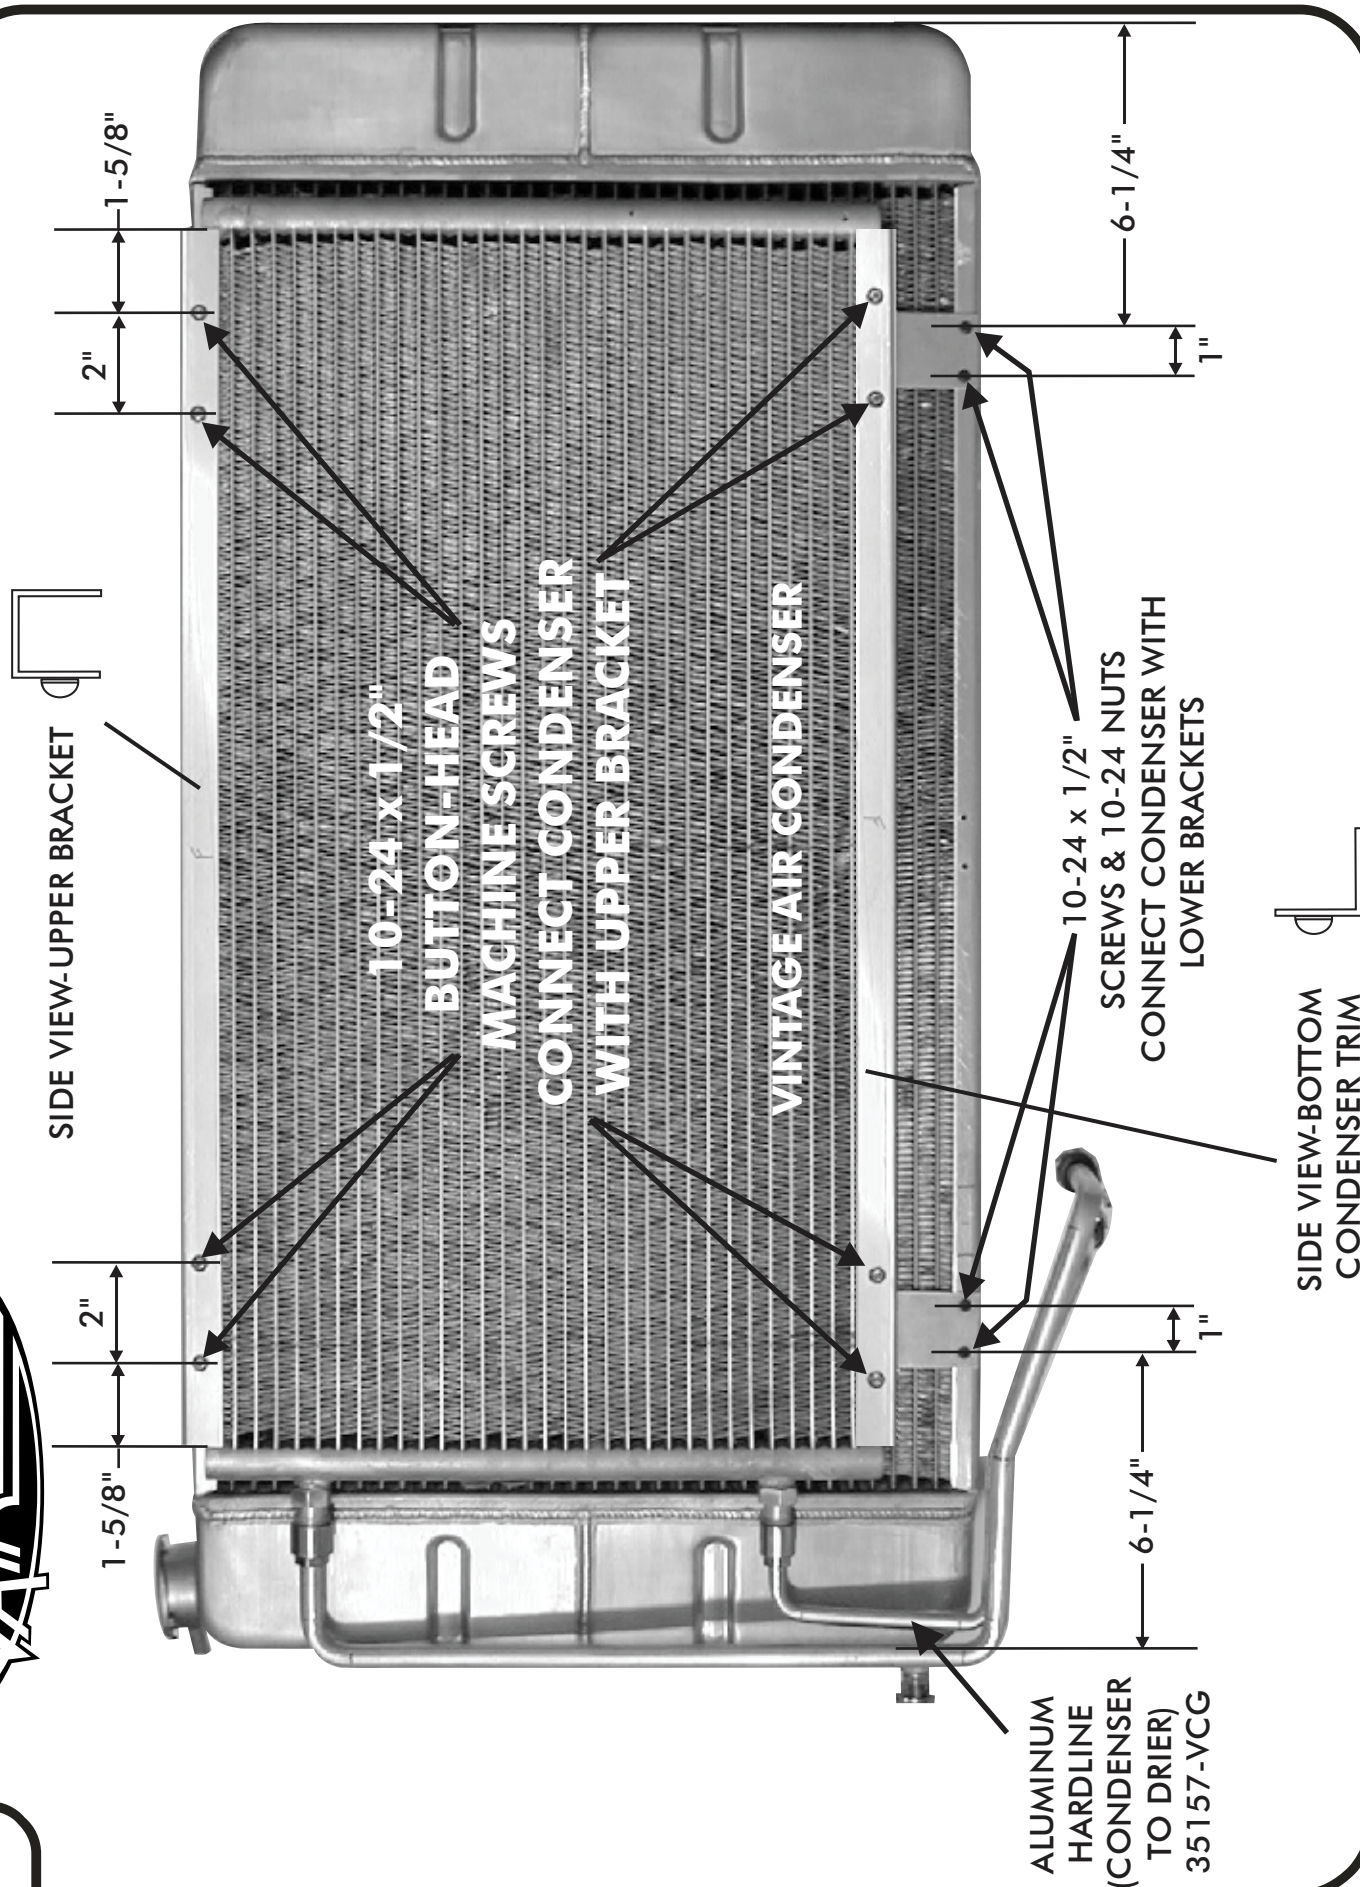

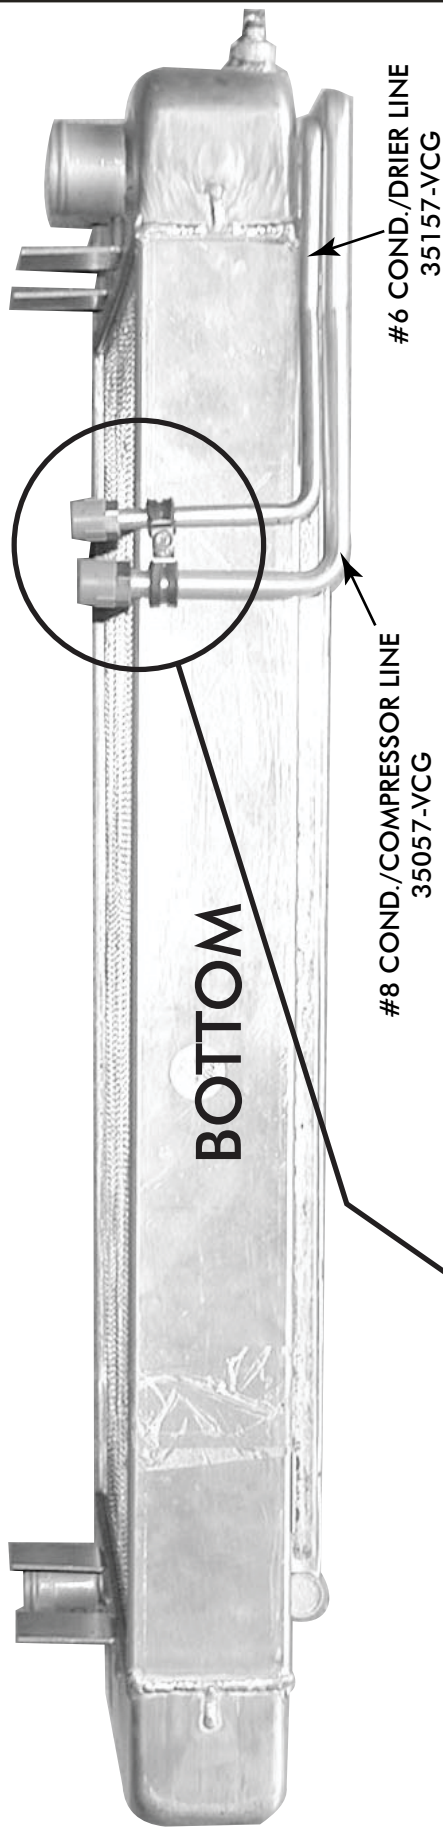

BOTTOM

**#10-32 x 1/2"
SCREW & #10-32
NUT w/STAR WASHER**

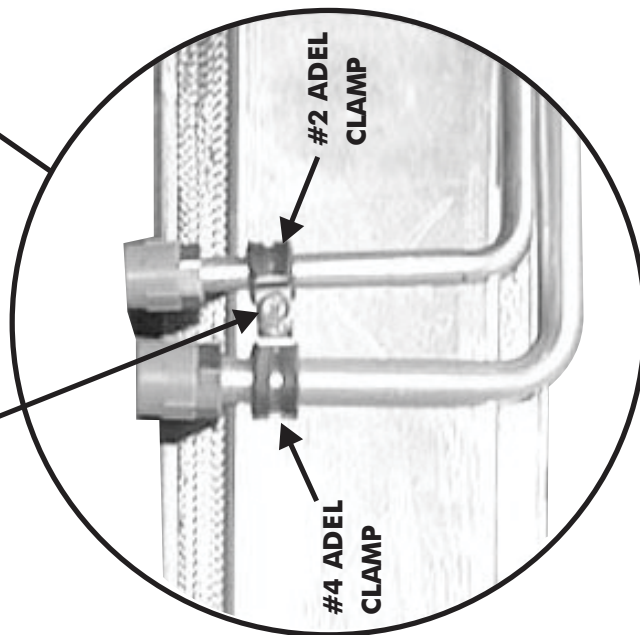

NO. QTY PART NO. DESCRIPTION

1.	1	03770-VUC	14" x 25-1/2" SUPER FLOW CONDENSER
2.	8	18059-VUB	10-24 x 1/2" STAINLESS STEEL BUTTON HEAD MACHINE SCREW
3.	8	18233-VUB	#6 x 3/8" SCREW
4.	4	18249-VUB	10-24 x 1/2" SCREW
5.	1	18250-VUB	10-32 x 1/2" SCREW
6.	1	18251-VUB	10-32 NUT w/STAR WASHER
7.	4	18260-VUB	10-24 NUT w/STAR WASHER
8.	8	18979-VUB	J-NUT #8 TAPPING SCREW
9.	1	31600-VUD	#2 ADEL CLAMP
10.	1	31603-VUD	#4 ADEL CLAMP
11.	1	33857-VUF	#6 O'RING
12.	1	33858-VUF	#8 O'RING
13.	1	35057-VCG	55-57 CHEVY #8 CONDENSER LINE CROSSFLOW RADIATOR
14.	1	35157-VCG	55-57 CHEVY #6 CONDENSER LINE CROSSFLOW RADIATOR
15.	1	64257-VCB	TOP CONDENSER BRACKET
16.	2	64256-VCB	BOTTOM CONDENSER BRACKET
17.	1	64259-VCB	BOTTOM CONDENSER TRIM COVER